
Zehnder Charleston
zestawy montażowe CVD/BH

Instrukcja montażu

4 x BH

2 x

4 x CVD

6 x BH





2 x

6 x CVD

8 x BH

2 x



8 x CVD

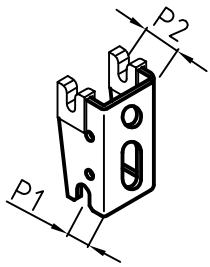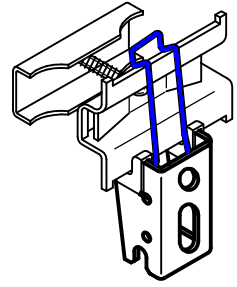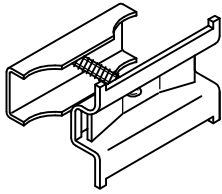

$$D2 = WA + T$$

	P1	P2	WA
CVD0	10	-	23
	-	15	28


	T	62	100	136	173	210
		54	73	91	109	128
		59	78	96	114	133

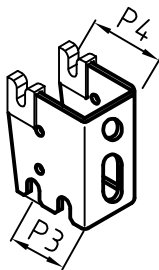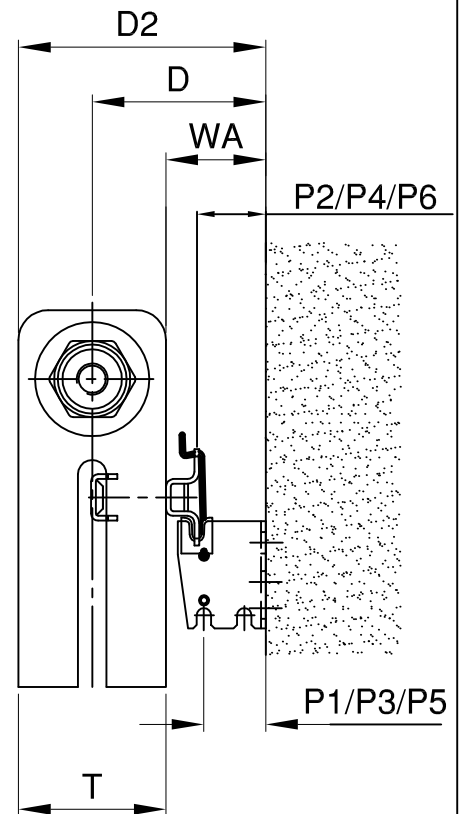

$$D2 = WA + T$$

	P3	P4	WA
CVD1	25	-	38
	-	30	43





	T	62	100	136	173	210
		69	88	106	124	143
		74	93	111	129	148

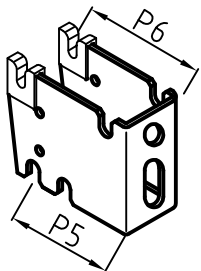


$$D2 = WA + T$$


	P5	P6	WA
CVD2	45	-	58
	-	50	63

	T	62	100	136	173	210
		89	108	126	144	163
		94	113	131	149	168

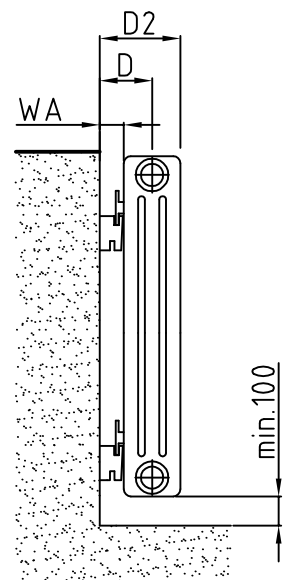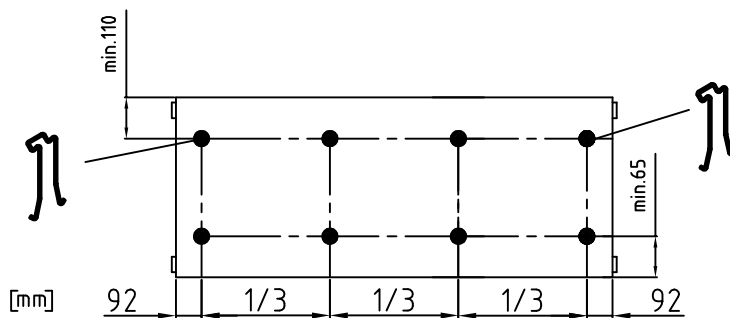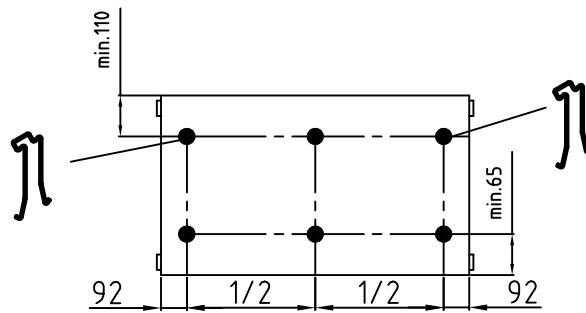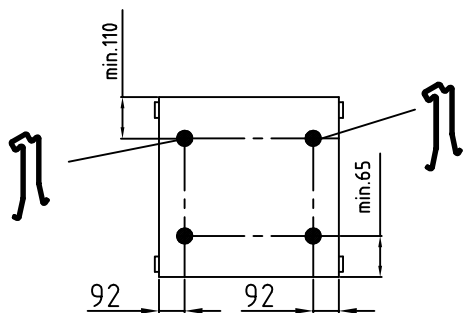


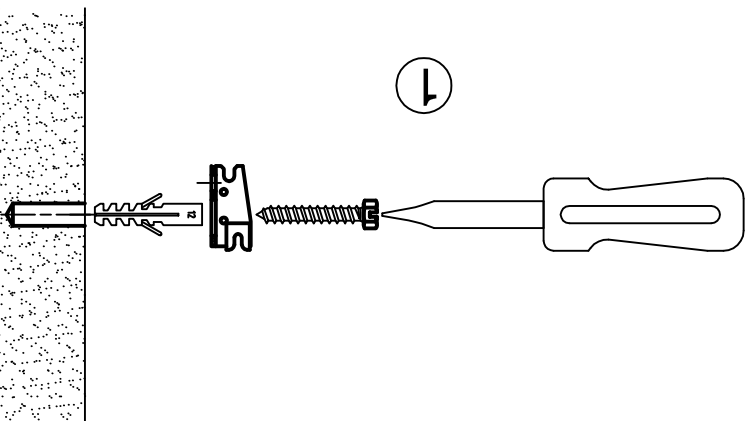


1

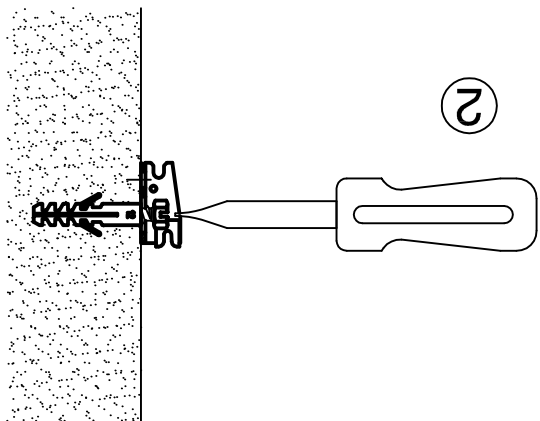


2

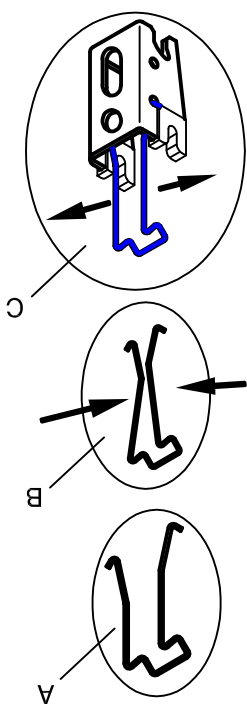


3

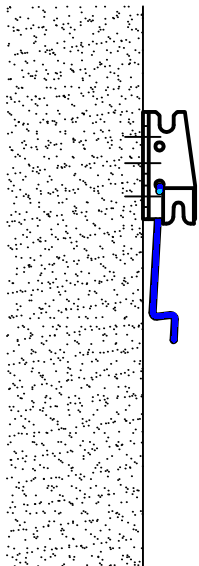

4

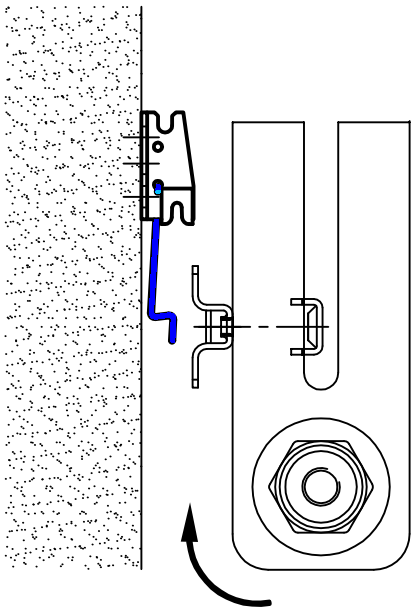

5

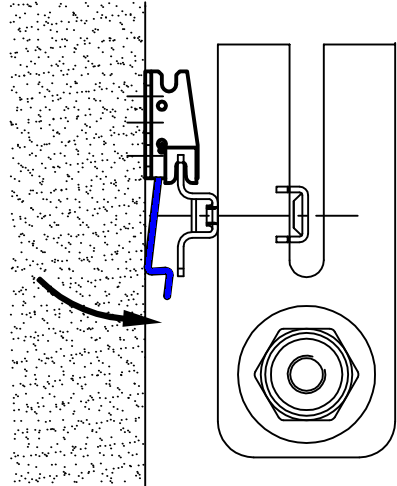

6

